


REPAIR MANUAL

Inside View from the Kite laying on its Leading edge

I) For struts featuring 2 webbings on the leading edge

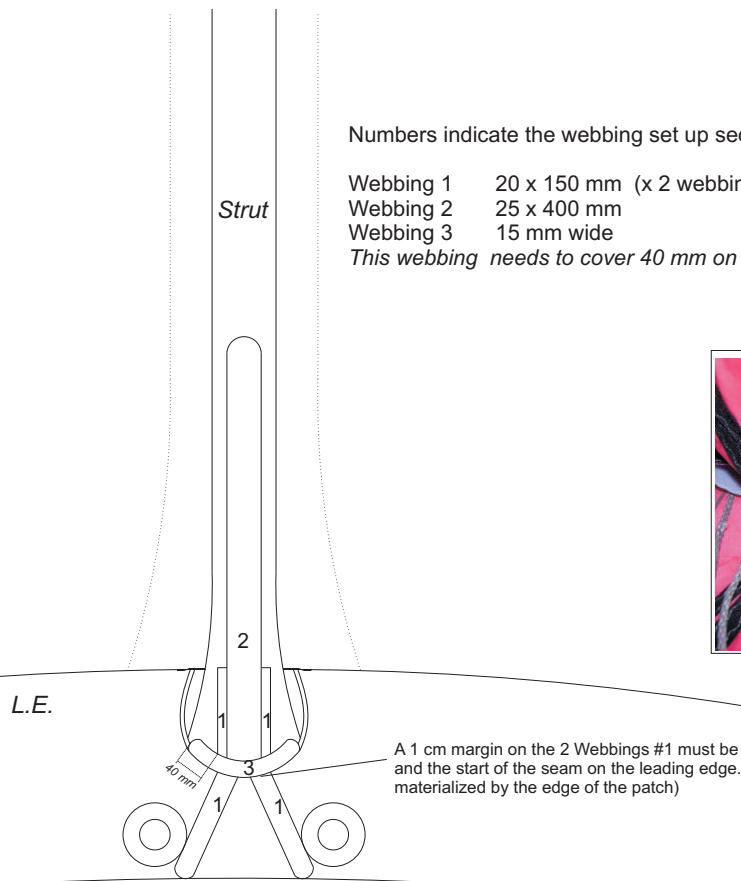

Numbers indicate the webbing set up sequence:

Webbing 1 20 x 150 mm (x 2 webbings)

Webbing 2 25 x 400 mm


Webbing 3 15 mm wide

This webbing needs to cover 40 mm on each side of webbing 1



A 1 cm margin on the 2 Webbings #1 must be set between the edge of the strut (webbing 3) and the start of the seam on the leading edge. (the start of the seam on the leading edge is materialized by the edge of the patch)

II) For struts featuring 1 webbing on the leading edge

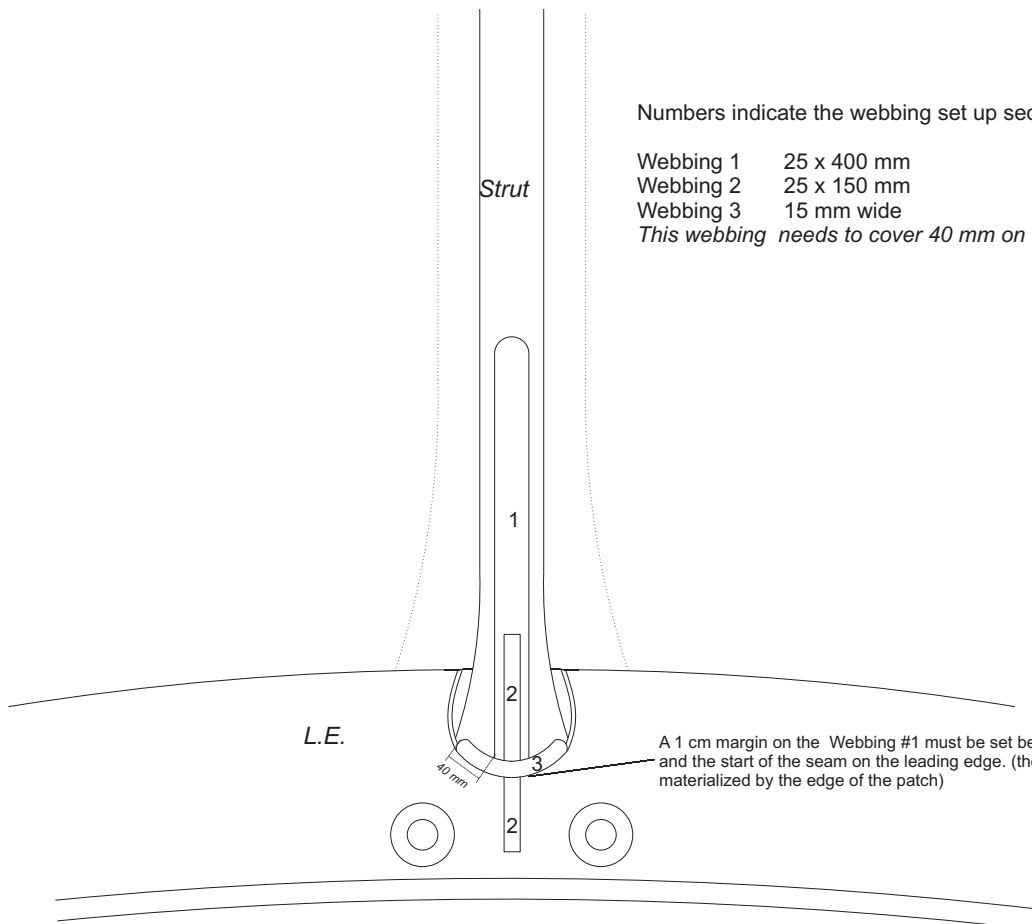

Numbers indicate the webbing set up sequence:

Webbing 1 25 x 400 mm

Webbing 2 25 x 150 mm

Webbing 3 15 mm wide

This webbing needs to cover 40 mm on each side of webbing 1

A 1 cm margin on the Webbing #1 must be set between the edge of the strut (webbing 3) and the start of the seam on the leading edge. (the start of the seam on the leading edge is materialized by the edge of the patch)